

Linear Acoustic MT2000 Quick Start Guide

(S/W Version 00.00.31 and higher)

BASIC OPERATION:

The front panel joystick/encoder can be turned (rotated), pressed in, as well as pressed up, down, left, right.

To power on/off the unit, press and hold the joystick in

The display is divided into two halves.

- Status/Control window on the left. All statuses, audio meters, and menus are displayed and adjusted.
- Loudness/Volume Control window on the right. Loudness measurements and envelope information about the audio source are displayed. The speaker/headphone volume control is functional in this window as well.

To change between the two windows, press the joystick/encoder in 2x quickly (double-click)

Status/Control Window

To navigate through menus and displays, press the joystick/encoder:

UP or DOWN to move through a menu structure "vertically"

RIGHT to:

- move to the next menu option to the right.
- Accept the change in a parameter value (change from current value is indicated by a * character to the left of the parameter name)

LEFT to "escape"/back out of submenus, or to circle left at the top menu.

(If ever feeling lost in the menus and want to get back to the top level menus, press the joystick to the left repeatedly)

The Setup menu and sub-menus are where all the parameters and inputs are adjusted.

To adjust a parameter, turn the encoder to the value you want and then press it to the right to select (enter) the value




Loudness/Volume Control Window

Press the joystick/encoder:

UP to reset the loudness measurements

DOWN to mute or unmute the speaker/headphone outputs

Turn the encoder to adjust the listening volume

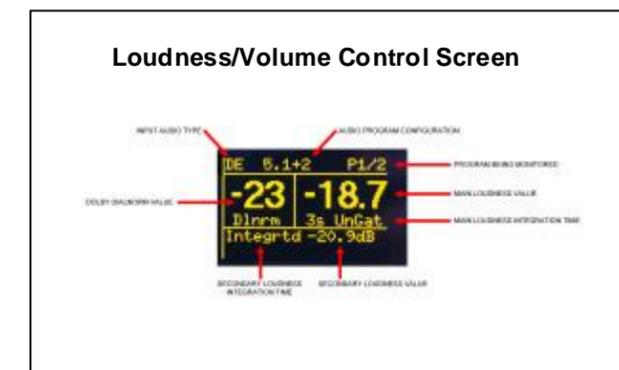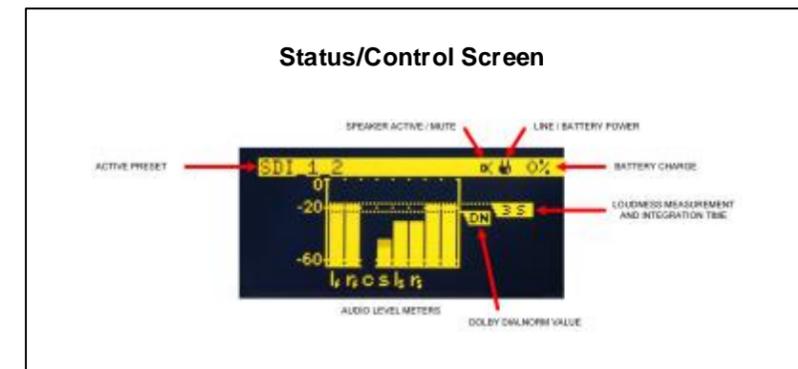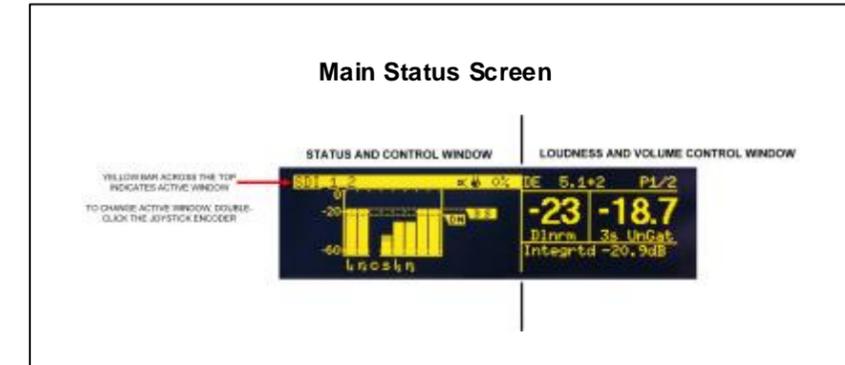

Linear Acoustic MT2000 Menu Tree

(S/W Version 00.00.31 and higher)

